


# MOHOC™

ELITE OPS CAMERA

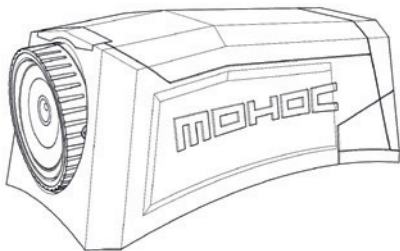

## QUICK START GUIDE




# OVERVIEW

## Included in the box:

- 1 MOHOC™ camera
- 1 Li-Ion Rechargeable battery
- 1 Lanyard
- 1 Micro USB cable
- 2 Velcro™ mounting patches
- 1 MOHOC™ bag
- 1 MOHOC™ sticker


## The MOHOC™ Camera

- 1 Door
- 2 Rotating lens barrel
- 3 Curvelock™ base
- 4 Latch release
- 5 Lower latch
- 6 Upper latch
- 7 ON/OFF/RECORD toggle
- 8 Photo button
- 9 Lens level indicators
- 10 Lanyard anchor points

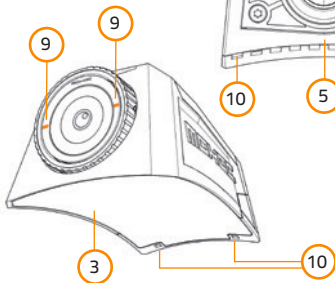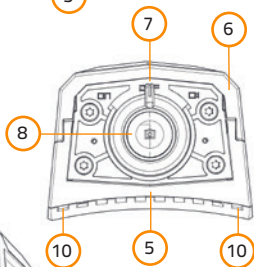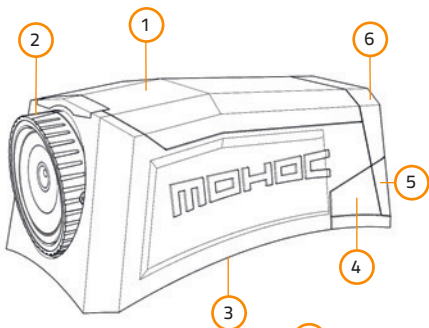


# INSTRUCTION TO OPEN DOOR


1. Squeeze both latch releases

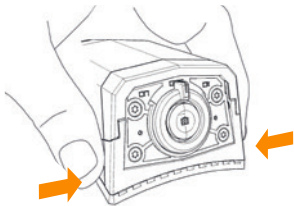


2. Pull the lower latch out.

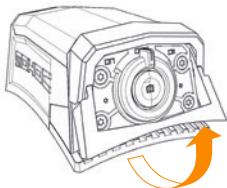

3. Release the upper latch and pull the door upwards.

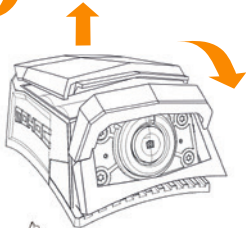

4. The door is now open.

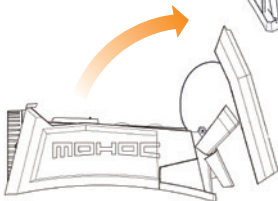


## MICRO SD & BATTERY INSERT

### Micro SD Card

Insert micro SD Card (Class 10, UHS-1 or higher required).

Sold separately.

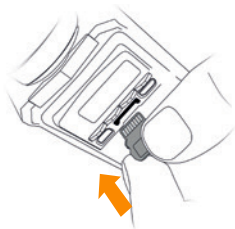

### Li-Ion Rechargeable Battery

Insert rechargeable battery and connect micro USB to charge. For fastest charging plug into wall power outlet, camera charges in all 3 positions

(ON, OFF, Record). To charge with computer USB, camera must be in ON position.

### CR123A Battery

Insert 2 CR123A batteries (positive terminals to the right).

Sold separately.


To ensure optimal and safe performance we only recommend you purchase from a well-known manufacturer such as Panasonic®, Energizer® or Duracell®



# CAMERA OPERATION


Rotate Toggle to desired position:  
ON, OFF, or Record

1. Powers ON and starts recording.

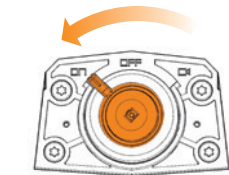

2. Powers ON in standby mode.

3. Turns camera OFF.

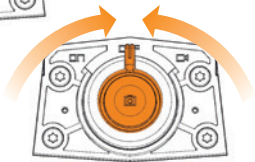

**4. Photo Button:**  
With toggle in either ON or Record position press the photo button to capture still images.

## VIBRATION RESPONSE

Powers ON	3 Short Vibrations (■■■)
Starts Recording/ Photo taken	1 Short Vibration (■)
Stops Recording	2 Short Vibrations (■■)
Powers OFF	1 Long Vibration (—)
WARNINGS*	5 Short Vibrations (■■■■■)

\*Open door and view display screen for specific warning message

# CAMERA SETTINGS

## Changing Camera Settings

Turn Camera to ON position to change camera settings. Open door and use display to view setting.

Press  menu to scroll through the settings options.

Hold  menu for 3 seconds to return to STANDBY.



 Menu/Back

 Scroll Left

 Scroll Right

 Select



**Settings:** 1080p/60fps, 1080p/30fps, 720p/120fps, 720p/60fps, 720p/30fps, 60 sec lapse, 30 sec lapse, 5 sec lapse, 3 sec lapse




**ON or OFF:** WiFi only turns on when the toggle is in the ON position and WiFi setting is ON.


**WiFi never turns on in Record mode.**




**SHOW MORE** ✓

Press ✓ to see the following **ADDITIONAL OPTIONS**


 **LOOP RECORD** ▶ OFF, 10 MINUTE, MAX

 **ORIENTATION** ▶ NORMAL, UPSIDE DOWN,  
or AUTO ADJUST

 **POWER SAVE** ▶ ON or OFF

 **VIBRATE** ▶ ON or OFF

 **CAMERA DEVICE** ▶ Your MOHOC™ MODEL #  
and SERIAL #, FIRMWARE  
VERSION, FACTORY RESET

 **SD CARD** ▶ SD CARD DETAILS, ERASE, or  
FORMAT SD CARD


 **DATE / TIME** ▶ SET DATE and TIME

 **DATE STAMP** ▶ TURN ON DATE/TIME STAMP

Then returns to **STANDBY**.


## CAMERA MOUNTING

Apply Velcro™ mounting patch to desired position on helmet. Firmly attach MOHOC™ to Velcro™ mounting patch.

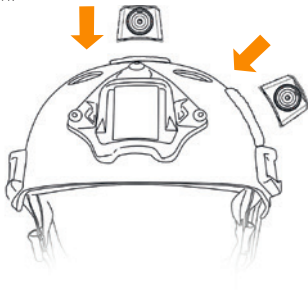


### Rotating Camera Lens

MOHOC™ lens rotates up to 180°. If required, rotate lens barrel to maintain horizontal field of view. Use level lens indicators as a guide.

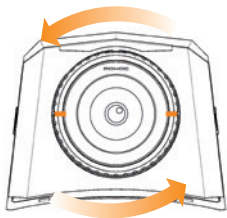

## Connecting To Other Devices

- Connect micro USB to computer
- Download directly to computer with micro SD card
- Connect to TV with micro HDMI connector
- Connect to MOHOC App

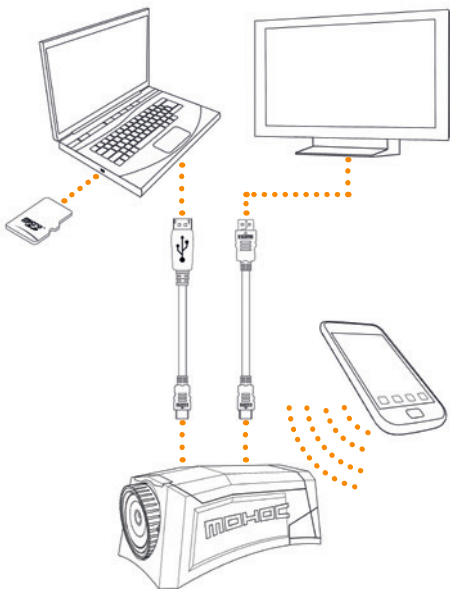

Contact [info@mohoc.com](mailto:info@mohoc.com) or visit the FAQ page on [www.mohoc.com](http://www.mohoc.com) for assistance, additional product information and features.

**MOHOC**

+1.208.806.1391

[info@mohoc.com](mailto:info@mohoc.com)

[www.mohoc.com](http://www.mohoc.com)

© 2015 MOHOC, Inc. All rights reserved.

Rev 10.15